

INSTRUCTION MANUAL

REPLACEMENT OF THE TELESCOPIC HANDLE

PRO G. / PRO Z. BAGS

TOOLS

Screwdriver with square or Phillips head bit



1 Identify the location of the telescopic handle on the outside.



2 Open the bag to access the bottom lining.



3 Detach the bottom lining to access the screws.



4 Using a power screwdriver or Phillips screwdriver, unscrew the screws from inside the bag.



5 Repeat this operation for all six screws. Remove the telescopic handle.



6 Install the new telescopic handle, starting by screwing in two screws with washers. Ensure that the holes in the bag are properly aligned with those in the handle casing before screwing.



7 Repeat this operation for all six screws. Screwing should be done until a slight compression of the material is visible.



8 Reattach the linings to their Velcro fastenings. Check that it operates properly.